



AVAIL™ Glovebag System

SAFE, HIGH-PERFORMANCE
ASBESTOS REMOVAL FROM PIPE



PROTECTING PEOPLE AND THEIR ENVIRONMENTS FROM EXPOSURE

ILC Dover's Grayling™ AVAIL brand glovebags enjoy the industry reputation of being the highest performing, easiest to use, and safest method to remove asbestos insulation from pipe. It is no wonder that more professionals choose AVAIL than any other brand. AVAIL glovebags have been used to remove over 50 million linear feet of pipe insulation.





The AVAIL QuickTwist glovebags incorporate all the safety and labor-saving features of the standard AVAIL glovebags, plus a debris chamber design that makes it safer and easier for workers to twist off the waste area. The QuickTwist design has two distinct work zones, the removal area and the debris chamber. This two-stage design makes it safer and easier for workers to remove and securely separate debris-laden bags from pipe. The QuickTwist incorporates a larger work area with a narrower and taller debris chamber so that less bunching is required to twist close the glovebag.

The increased work area gives the worker greater freedom inside the glovebag to access difficult pipe insulation. Each debris chamber is tall enough to handle intact sections of pipe insulation, less breakage of debris means lower fiber counts. After waste is funneled into the chamber, the worker easily twists it closed at the top and tapes the neck to prevent escape of dangerous fibers.



AVAIL QuickTwist Glovebag Specifications

MODEL	QT10	QT14	QT18	QT30
Item #	01610206	01614156	016182106	01630356
Work area	42" to 90'	48" to 75'	54" to 55'	60" to 30'
Pipe diameter	up to 10"	10" to 14"	14" to 18"	18" to 30"
Quantity/case	20	15	10	5
Glove assemblies	1 set/bag	1 set/bag	2 sets/bag	3 sets/bag
Pipe config.	horizontal	horizontal	horizontal	horizontal
Mil thickness	6 mil	6 mil	6 mil	6 mil

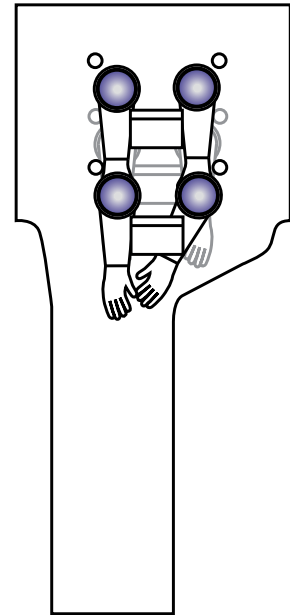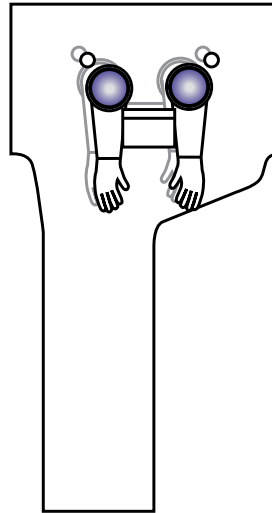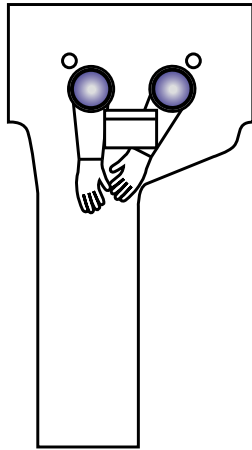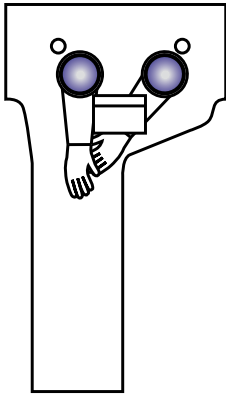


AVAIL SPECIAL APPLICATIONS GLOVEBAG SYSTEM

Not all applications are long runs of horizontal pipe. These special application AVAIL glovebags make your workers more productive when working on difficult vertical pipe, small valves and large vessels.

The AVAIL M6 is the perfect bag for small maintenance and repair operations where the work is on small pipe, valves and gaskets. The M6 has precut openings, collars, and fiber guard glovesleeves like the other AVAIL models.

AVAIL glovebags for vertical applications improve worker productivity through design features that assist in the asbestos removal process. Debris weight and bulk is channeled away from the work area by the offset debris chamber. Awkward twisting and turning of the bag is eliminated due to the work area being separated from the debris area. Installation is quick, safe and secure with fitted collars and precut bag openings.

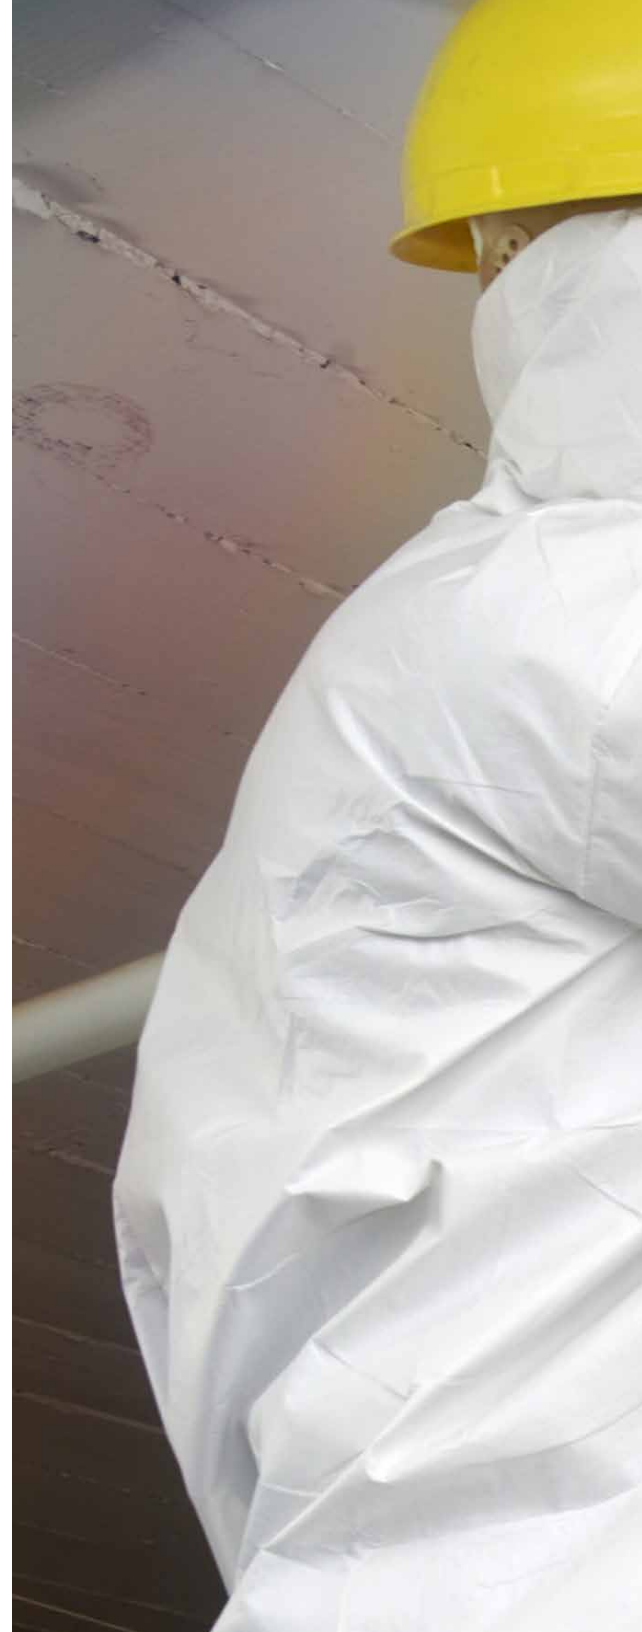



AVAIL STANDARD GLOVEBAG SYSTEM FOR LONG AND SHORT PIPE RUNS

Extended-run glovebags dramatically increase productivity and safety by eliminating multiple bag set-up labor and reducing job site fiber counts. The extended-run design is more efficient because it encloses a larger work area per bag and allows workers to remove more insulation than when used as a single bag.

The extended-run design set the industry standard for efficiency in removing long runs of pipe insulation. More contractors use AVAIL glovebags for asbestos abatement than any other brand. It is the professionals' choice and the number one selling glovebag worldwide.



AVAIL Glovebag Specifications

MODEL	ITEM #	QTY	BAG DIMS	PIPE DIA	GLOVE ASSY	BAG CONFIG
M6	011616	40	22" x 60" x 6m	UP TO 6"	1 SET/BAG	HOR/VERT
QT10	01610206	20	54" x 86" x 6m	UP TO 10"	1 SET/BAG	HOR
QT14	01614156	15	60" x 98" x 6m	10" TO 14"	1 SET/BAG	HOR
QT18	016182106	10	66" x 114" x 6m	14" TO 18"	2 SETS/BAG	HOR
QT30	01630356	5	72" x 146" x 6m	18" TO 30"	3 SETS/BAG	HOR
4460 EXT	0164460256	25	44" x 60" x 6m	UP TO 8"	1 SET/BAG	HOR
4460	011446016	25	44" x 60" x 6m	UP TO 8"	1 SET/BAG	HOR
5460 EXT	0165460256	25	54" x 60" x 6m	UP TO 10"	1 SET/BAG	HOR
5460	012546016	25	54" x 60" x 6m	UP TO 10"	1 SET/BAG	HOR
6072 EXT	0166072206	20	60" x 72" x 6m	10" TO 14"	1 SET/BAG	HOR
6072	012607216	20	60" x 72" x 6m	10" TO 14"	1 SET/BAG	HOR
6684-2 EXT	01666842156	15	66" x 84" x 6m	14" TO 18"	2 SETS/BAG	HOR
6684-2	012668426	15	66" x 84" x 6m	14" TO 18"	2 SETS/BAG	HOR
72120-2	0127212026	10	72" x 120" x 6m	18" TO 30"	2 SETS/BAG	HOR
V10	0131016	20	60" x 84" x 6m	UP TO 10"	1 SET/BAG	VERT
V24	0132426	15	84" x 96" x 6m	10" TO 24"	2 SETS/BAG	VERT
GSV12	0131256	5	96" x 180" x 6m	UP TO 12"	6 SETS/BAG	VERT
GSH620	0176208310	1	240" x 156" x 9m	UP TO 30"	8 SETS/BAG	HOR
GSH1220	017122014410	1	240" x 228" x 9m	UP TO 72"	12 SETS/BAG	HOR

DANGER
CONTAINS ASBESTOS FIBERS
AVOID CREATING DUST
CANCER AND LUNG DISEASE
HAZARD

DANGER
CONTAINS ASBESTOS FIBERS
AVOID CREATING DUST
CANCER AND LUNG DISEASE
HAZARD





AVAIL GLOVEBAGS: 5 ADVANTAGES, ONE SMART SOLUTION

1 *INCREASED SAFETY*

Grayling AVAIL glovebags deliver the highest performance because of design features that save labor while increasing safety. All AVAIL bags have FiberGuard glovesleeves that ensure an air and liquid tight seal at this critical point, and latex work gloves that are extra large and flock lined for worker comfort. The QuickTwist design offers a work chamber with more room than traditional glovebags and a debris chamber that holds full lengths of insulation and twists off easily and safely.

2 *A MORE DURABLE MATERIAL*

Ultra strong polyethylene ensures excellent viewing of the work area while yielding the highest seal quality. A large drop-in tool pouch is positioned for quick and easy access to your tools.

3 *CONVENIENT AND EASY TO USE*

AVAIL bags are packaged in a dispensing box that protects unused bags from damage due to handling. The bags are on a roll and can be cut off and used in sections of 1, 2, 3 or more. 6 mil is standard construction.

4 VERSATILE SIZES

Considered the standard Avail glovebags, the 4460EXT and 4460 enclose pipe diameters up to 8". Each chamber measures 44" x 60" with one arm set per chamber, 6mil construction. Available in the popular Extended-run design on a roll or as pre-cut single bags.

The full-featured 5460EXT and 5460 Avail glovebag set the industry standard for efficiency on pipe diameters up to 10". Available in an Extended-run design on a roll or as pre-cut single bags.

The M6 is for repair and maintenance operations where the work is on small sections of insulation or gasket replacement. For pipe diameters up to 6", each chamber measures 22" x 60" with one arm set with opposing glovesleeves, 6mil construction.

The full-featured V10 glovebag works on vertical pipe diameters up to 10". Each bag measures 60" x 84". An offset debris chamber moves the weight and bulk away from the work area.

Perfect for work on a larger diameter vertical pipe, the V24 accommodates diameters from 10" to 24".





5 *ERGONOMIC BENEFIT*

Proper glovesleeve positioning lets the worker reach the insulation without having to support the weight of debris. This eliminates worker fatigue and therefore increases productivity.

Precut tops and fitted collars eliminate awkward cutting and measuring on the job and allow the worker to attach the glovebag quickly and safely with no bunching of the bag where it attaches to the pipe.

Entry ports allow safe, fiber and liquid tight attachment of the HEPA vacuum and wetting agent/encapsulant wand.

QuickTwist 1-2-3 is available in Grayling's extended-run design that set the industry standard for efficiency in removing long runs of pipe insulation. Only the highest quality raw materials are converted into AVAIL glovebags on state-of-the-art manufacturing equipment. Then, the most stringent quality control system in the industry is employed to deliver the AVAIL glovebag line, consistently the most superior product available.

Grayling and AVAIL are trademarks of ILC Dover.

TALK WITH OUR EXPERTS

At ILC Dover, we look forward to collaborating with you to develop systems tailored to your exact needs. To speak with one of our experts, simply call **+1.302.335.3911** or visit **www.ilcdover.com**.



BEYOND BOUNDARIES™

Innovators at our core, we develop engineered solutions for our customers' complex problems. Recognized globally for our flexible containment solutions, ILC Dover serves customers in a diverse range of industries, including pharmaceutical and biopharmaceutical manufacturing, personal care, food and beverage, chemical, aerospace, healthcare and government agencies. At ILC Dover, quality is a culture, not a measurement. Our customers will tell you that we cater to their every need and that we're highly innovative, responsive, dedicated and competitive. We have been innovating since 1947. ILC Dover's visionary solutions improve efficiency, safeguard workers and product, and prevent disasters — proof that we are on the front line of business excellence.

Engineering evolution beyond boundaries.



One Moonwalker Road
Frederica, DE 19946 USA
+1.302.335.3911
+1.800.631.9567
customer_service@ilcdover.com

www.ilcdover.com