



1000L



The PaperIBC comes complete and ready to fill with; the container body, a Guardian form-fit liner in a cassette with all necessary fitments and a lid for the container.

PaperIBC 1000L Body Specifications:





- Capacity: 1000 liters / 265 gallons
- Outer dimensions: 43" X 43" X 40"
- Wall Thickness: 9 ply corrugated, 1-3/4" thick
- Net weight: 66 lbs – pallet not included

Guardian Cassetted Form Fit Liner Specifications:

- Capacity: 1000 liters / 265 gallons
- Dimensions: 41" X 41" X 42"
- Construction: 3 plys of 3.2mil type 43 coextruded low density polyethylene attached to a fitted corrugated cassette.
- Attachments: 2" BSP threaded fill fitment with protective cap and 2" BSP threaded dispense fitment with crown cutter, protective cap and locking ring.



Accessories and Tools:




<p>Part #452005 2" ball valve with 2" threaded connector</p>		<p>Part #452004 2" cam-lock quick connect fitment</p>	<p>Part #452003 Dispense fitment locking ring tool</p> 
<p>Part #452006 Optional polyethylene cover</p>	<p>Part #452002 Fill bridge squaring tool</p> 	<p>Various fitments and valves are available</p> 	

PaperIBC Pallet and Strapping Recommendations



PaperIBC 1000L Pallet Recommendation: (not included with container)

- Top Deckboard - 7 ea. 44" X 4" X 1-1/2"
- Bottom Deckboard - 3 ea. 44" X 4" X 1-1/2"
- Runners - 4 ea. 44" X 1-1/2" X 2"

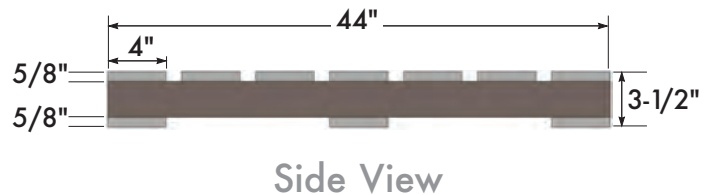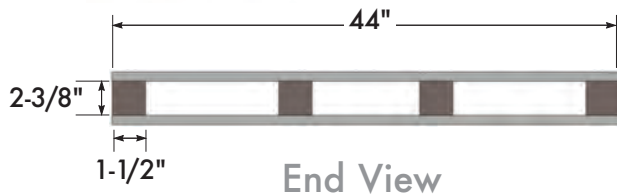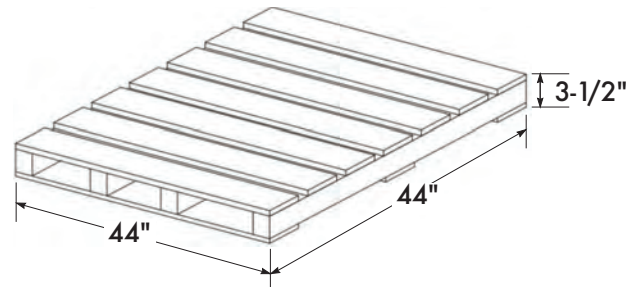

Strapping Recommendation: (not included with container)

Polyester or nylon strapping 5/8" wide X 25mm thick.



Band the container to the pallet with four straps, using the guide provided on the lid.

