


Rigid Round Bottom Drum Liners

Heavy duty, form fitting, liners for 55 gallon drums



The Guardian Rigid Round Bottom drum liners are heavy gauge, self-supporting liners that are easy to insert into a 55 gallon drum and are ideal for mixing, pumping or pressure plate dispensing applications. These heavy duty polyethylene liners are tough and abrasion resistant to extend the life of your drums and reduce or eliminate cleaning costs.

Guardian Rigid Round Bottom Drum liners are "form fit" to the interior dimensions of 55 gallon drums. The fitted shape of the liner eliminates pleats and folds that can trap material and hinder complete filling and dispensing in a standard drum liner.

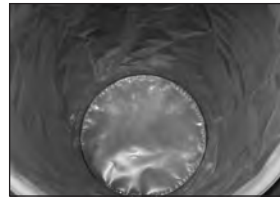

The liner is manufactured by attaching a molded 20mil polyethylene lip to a 10mil cylindrical polyethylene body and then sealing the body to a 20mil round polyethylene bottom to form the base of the liner. The snap-fit lip design fits tightly and securely to the lip of a standard 55 gallon drum, eliminating any leakage between the liner and the drum and forming a gasket seal between the drum and drum lid. The liner is easy to install and remove and is recyclable or disposable.



- The form-fit design allows for complete product evacuation and eliminates the need for drum cleaning or reconditioning.
- This liner is perfectly suited for in-plant mixing operations and follower plate dispensing processes.
- The molded top lip securely positions the liner and holds the liner in place during filling
- The liner is made from FDA approved film for food contact applications



Part Number	Description	Gauge	Case Qty
920910	55 gallon rigid drum liner insert	10mil PE	25/case

MKT-0177