



# 275G GMA Pallet Footprint



The PaperIBC comes complete and ready to fill with; the container body, a Guardian form-fit liner in a cassette with all necessary fitments and a lid for the container.

### PaperIBC 275G-GMA Body Specifications:

- Capacity: 275 gallon / 1041 liters
- Outer dimensions: 39" X 47" X 42"
- Wall Thickness: 9 ply corrugated, 1.75" thick
- Net weight: 66 lbs – pallet not included

### Guardian Cassetted Form Fit Liner Specifications:

- Capacity: 275 gallon / 1041 liters
- Dimensions: 44" X 44" X 44"
- Construction: 3 plys of 3.2mil type 43 coextruded low density polyethylene attached to a fitted corrugated cassette.
- Attachments: 2" BSP threaded fill fitment with protective cap and 2" BSP threaded dispense fitment with crown cutter, protective cap and locking ring.



### Accessories and Tools:

Part #452005  
2" ball valve with  
2" threaded connector



Part #452003  
Dispense fitment  
locking ring tool



Part #452004  
2" cam-lock quick  
connect fitment



Part #452002  
Fill bridge  
squaring tool



Part #452006  
Optional  
polyethylene cover



Various fitments and  
valves are available





## PaperIBC Pallet and Strapping Recommendations



### PaperIBC 275G - GMA

(not included with container)

- Top Deckboard:  
2ea - 40" X 5.5" X .625" on each end  
6ea - 40" X 3.5" X .625" spaced 2.29" apart
- Bottom deckboard:  
2ea - 40" X 5.5" X .625" on each end  
2ea - 40" X 3.5" X .625" centered 10.25" apart  
and 9.88" from end boards
- Runners:  
3ea - 48" X 3.5" X 1.25" cut to allow 4way access

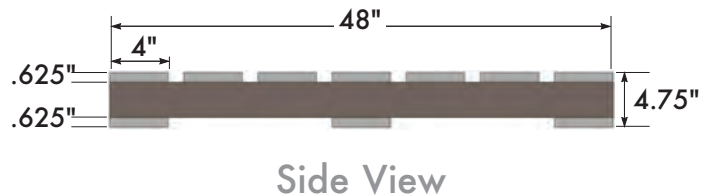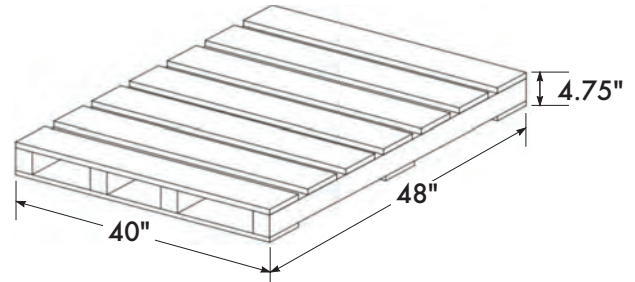

### Strapping Recommendation: (not included with container)

Polyester or nylon strapping 5/8" wide X 25mm thick.



Band the container to the pallet with four straps, using the guide provided on the lid. ➤

