




Sentinel Clear™

ADVANCED RESPIRATORY
PROTECTION



Sentinel XT Clear PAPR Hood and Blower
by ILC Dover (photo courtesy of Pharmatek)

**SUPERIOR RESPIRATORY PROTECTION FOR A BROAD RANGE OF USERS WORKING IN
PHARMACEUTICAL AND BIOPHARMACEUTICAL OPERATIONS.**

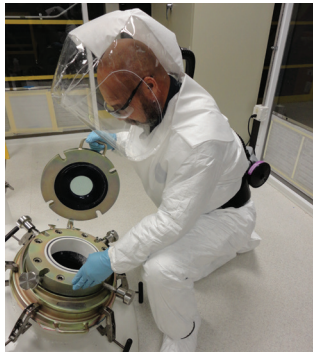

SECURE CLIP SYSTEM
KEEPS HOOD IN PLACE
EVEN WHILE BENDING

BENEFITS OF THE PANORAMIC HOOD

- Clear hood provides a 320° panoramic field of view
- APF of 1,000 provided
- The 8 scfm (230 lpm) of air supplied is above the NIOSH minimum of 6 scfm (170 lpm)
- Air distribution plenum improves comfort.
- Hood securely attaches to Tyvek® suits and cloth uniforms— supports multiple don/doff cycles
- Unique skirt/exhaust system inflates suit to deliver improved protection and comfort.
- Readily accommodates most head, hearing and eye protection
- Dual skirt delivers excellent protection.

THE SENTINEL XT™ SYSTEM IS SPECIFICALLY DESIGNED TO SUPPORT PHARMACEUTICAL CUSTOMERS AND INCLUDES THE FOLLOWING KEY COMPONENTS:

SENTINEL XT™ BLOWER/BATTERY

- 8 scfm (230 lpm) flow delivered to the hood.
- Brushless, long-life motor.
- Li polymer battery with 12-hour run time on a single charge.
- Lightweight integrated blower and battery is just 2.2 pounds.
- External battery life indicator gauge shows charge level.

FILTER CARTRIDGES

- External filters allow replacement without opening the blower housing
- P100/HEPA cartridges provide particulate-threat protection.
- OV/AG/HE cartridges provide protection against a range of organic vapors and acid gases.
- Multi-hazard cartridges provide protection against ammonia, methylamine, formaldehyde, chlorine, sulfur dioxide, hydrogen chloride, chlorine dioxide and hydrogen fluoride.

WAIST BELT/BACK HARNESS OPTIONS

- Quick-Loc decon belt — easy to use, easy to clean.
- Ergonomic back harness — adjustable support harness ideal for seated applications.



XT BASELINE BLOWER SHOWN WITH OV/AG/HE CARTRIDGES



8 SCFM OF AIR SUPPLIED TO THE HOOD IS ABOVE MINIMUM REQUIREMENT



BREATHING TUBE AND BLOWER COVERS

Additional accessories include breathing tubes in 25" and 33" lengths, breathing tube and blower covers, charging cradle/charger and a flow meter.



One Moonwalker Road
Frederica, DE 19946 USA
+1.302.335.3911
+1.800.631.9567
customer_service@ilcdover.com

www.ilcdover.com