



# PaperIBC

1000L/265 gal



## PAPER IBC CONTAINER FROM ILC DOVER

The Dependable, Economical and Environmentally Responsible Alternative

The PaperIBC container from ILC Dover comes complete and ready to fill with: the container body, a form-fit liner in a cassette with all necessary fitments and a lid for the container.

### PAPER IBC 1000L BODY SPECIFICATIONS:

- Capacity: 1000 liters / 265 gallons
- Outer dimensions: 43" x 43" x 40"
- Wall thickness: 9 ply corrugated, 1-3/4" thick
- Net weight: 66 lbs - Pallet not included

### GRAYLING CASSETTED FORM-FIT LINER SPECIFICATIONS:

- Capacity: 1000 liters / 265 gallons
- Dimensions: 41" x 41" x 42"
- Construction: 3 plys of 3.2 mil type 43 coextruded low density polyethylene attached to a fitted corrugated cassette.
- Attachments: 2" BSP threaded fill fitment with protective cap and 2" BSP threaded dispense fitment with crown cutter, protective cap and locking ring.



### ACCESSORIES AND TOOLS:

Part #452005  
2" ball valve with  
2" threaded connector



Part #452004  
2" cam-lock quick  
connect firmet



Part #452006  
Optional  
Polyethylene cover



Part #452003  
Dispense fitment  
locking ring tool



Part #452002  
Fill bridge  
squaring tool



Various fitments and  
valves are available






## PAPER IBC PALLET AND STRAPPING RECOMMENDATIONS



### PAPER IBC 1000L PALLET SPECIFICATIONS: (not included with container)

- Top Deckboard: 7 ea. 44" x 4" x 1-1/2"
- Bottom Deckboard: 3 ea. 44" x 4" x 1-1/2"
- Runners: 4 ea. 44" x 1-1/2" x 2"

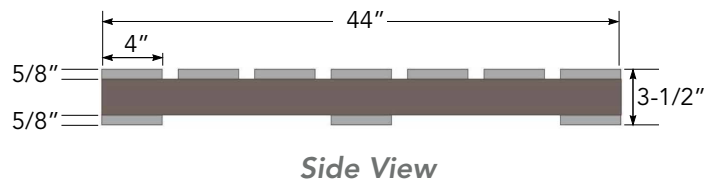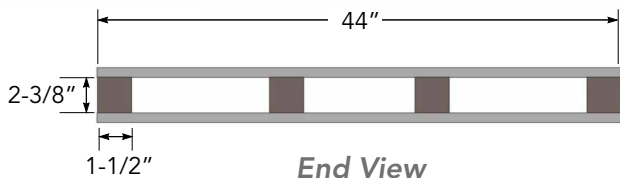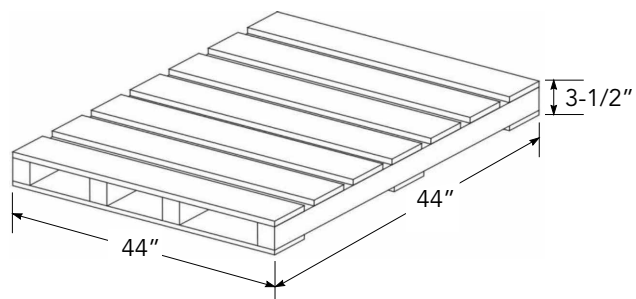

### STRAPPING RECOMMENDATION:

(not included with container)

Polyester or nylon strapping 5/8" wide x 25mm thick.



Band the container to the pallet with four straps, using the guide provided on the lid.



ILC Dover LP  
One Moonwalker Road  
Frederica, DE 19946 USA  
+1.302.335.3911  
+1.800.631.9567  
customer\_service@ilcdover.com

[www.ilcdover.com](http://www.ilcdover.com)