



# PaperIBC

## 275G GMA Pallet Footprint



### PAPER IBC CONTAINER FROM ILC DOVER

The Dependable, Economical and Environmentally Responsible Alternative

The PaperIBC container from ILC Dover comes complete and ready to fill with: the container body, a form-fit liner in a cassette with all necessary fitments and a lid for the container.

#### PAPER IBC 275G-GMA BODY SPECIFICATIONS:

- Capacity: 275 gallons / 1041 Liters
- Outer dimensions: 39" x 47" x 42"
- Wall thickness: 9 ply corrugated, 1-3/4" thick
- Net weight: 66 lbs - Pallet not included

#### GRAYLING CASSETTED FORM-FIT LINER SPECIFICATIONS:

- Capacity: 275 gallons / 1041 Liters
- Dimensions: 44" x 44" x 44"
- Construction: 3 plys of 3.2 mil type 43 coextruded low density polyethylene attached to a fitted corrugated cassette.
- Attachments: 2" BSP threaded fill fitment with protective cap and 2" BSP threaded dispense fitment with crown cutter, protective cap and locking ring.



#### ACCESSORIES AND TOOLS:

Part #452005  
2" ball valve with  
2" threaded connector



Part #452004  
2" cam-lock quick  
connect firmet



Part #452006  
Optional  
Polyethylene cover



Part #452003  
Dispense fitment  
locking ring tool



Part #452002  
Fill bridge  
squaring tool



Various fitments and  
valves are available



# PaperIBC 275G GMA Pallet Footprint



## PAPER IBC PALLET AND STRAPPING RECOMMENDATIONS




### PAPER IBC 275G-GMA PALLET SPECIFICATIONS:

(not included with container)

- Top Deckboard: 2 ea. 40" x 5.5" x 1/8" on each end  
6 ea. 40" x 3.5" x 1/8" spaced 2.29" apart
- Bottom Deckboard: 2 ea. 40" x 5.5" x 1/8" on each end  
2 ea. 40" x 3.5" x 1/8" centered 10.25" apart  
and 9 22/25" from end boards
- Runners: 3 ea. 48" x 3-1/2" x 1-1/4" cut to allow 4 way access

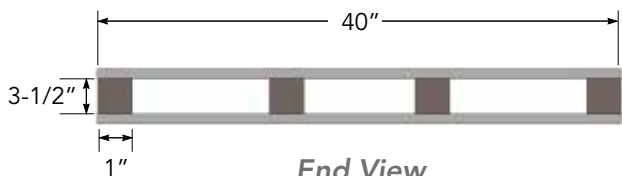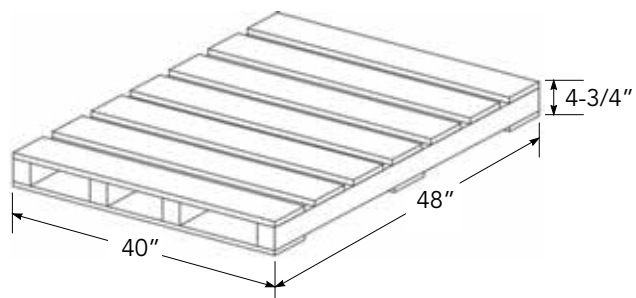

End View

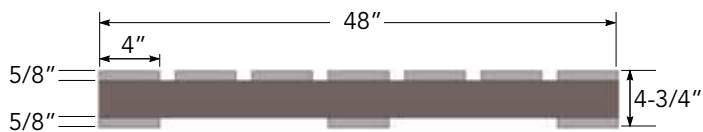

Side View

### STRAPPING RECOMMENDATION:

(not included with container)

Polyester or nylon strapping 5/8" wide x 25mm thick.



Band the container to the pallet with four straps, using the guide provided on the lid.



ILC Dover LP  
One Moonwalker Road  
Frederica, DE 19946 USA  
+1.302.335.3911  
+1.800.631.9567  
customer\_service@ilcdover.com

[www.ilcdover.com](http://www.ilcdover.com)